



300 Series Dosing Siphon Priming Information

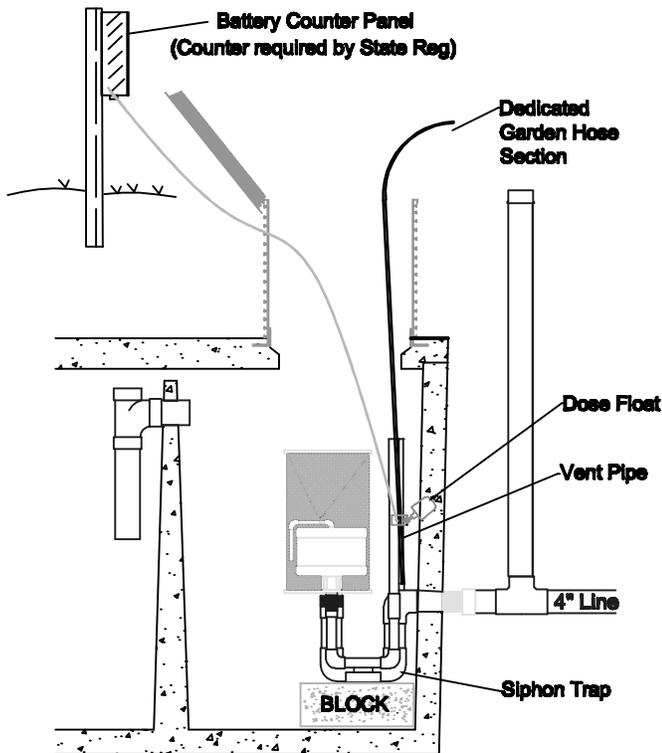

IF NO WATER IN COMPARTMENT

1. Use a piece of garden hose that is dedicated to priming the siphon and is not used for any other purpose to avoid contamination.
2. Locate the overflow pipe next to the tank wall.
3. Snake a piece of garden hose down the vent pipe so the end points to the trap.
4. Fill the trap with water.
5. The trap will only fill to the level of the discharge pipe.
6. Withdraw the hose section.
7. Wipe hose down and place in a plastic garbage bag for the next use.
8. Siphon is primed.

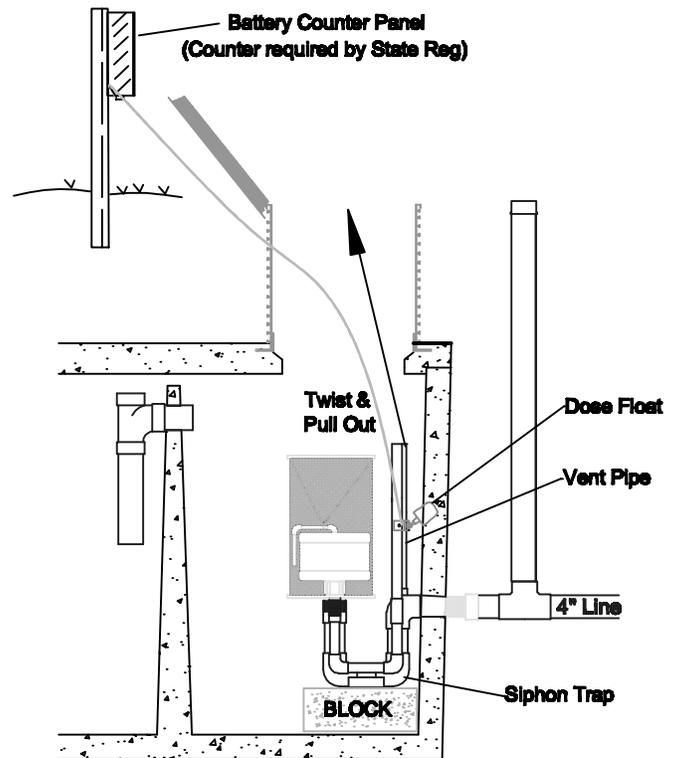

IF COMPARTMENT HAS WATER IN IT

1. Open outlet side of tank lid and locate the vent pipe.
2. Have gloves and pull out vent pipe (wiggle back and forth or twist), this pipe should not be glued during installation for priming the siphon.
3. Allow the water level in the tank to drop to the vent pipe fitting level (possibly 5 to 10 minutes).
4. Re-install the vent pipe into the pipe fitting twisting gently until pipe is snug.
5. The siphon should now be primed after allowing water back into the u-trap and air back into the bell of the siphon.